


# MEDIUM LED WALLPACK MLWP INSTALLATION INSTRUCTIONS

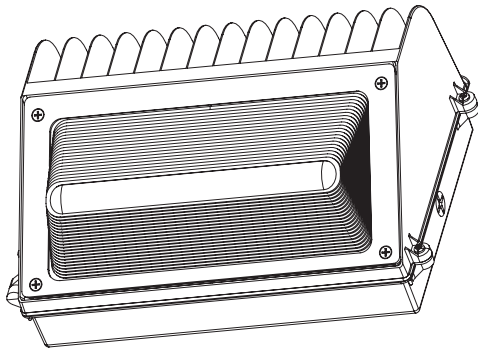

## WARNING

Please read instructions carefully before attempting to install fixture and retain instructions for future reference.

Caution: To avoid electrical shock hazard.

- Turn off the electricity before installing or servicing this fixture.
- Electrical connections need to comply with National Electric Code and Local Electric Code.
- The fixture should be installed by a qualified electrician.

## APPLICATION/USE

This product is rated for use in wet locations and designed for surface mounting only. It is best to mount the fixture to a standard 4" electrical box. If a different size electrical box already exists to the mounting location, you may need to purchase additional equipment for installation.

## INSTALLATION

1. Do not touch the yellow portion of the LED array. Damage may occur.
2. Do not wire fixture until fixture is mounted.
3. Remove front housing by loosening four screws, swing front housing and disconnect connectors.
4. Drill appropriate knockouts from back of fixture for wiring access.
5. Knock out appropriate holes around outlet hole. Mount rear housing to the outlet box, previously applying silicon sealant between fixtures and mounting means.
6. See "Fixture Wiring"
7. Replace front housing, connect connector, and swing front housing into position. Tighten screws which were loosened in Step 3.

## FIXTURE WIRING

1. Connect the black fixture lead to the voltage supply lead with wire connector.
2. Connect the white fixture lead to the neutral supply lead with the wire connector.
3. Connect the green or green/yellow or bare copper ground lead to the supply ground lead with the wire connector.
4. Cap and insulate all unused leads.

Need help? Call 1-800.956.3456 to speak with our installation and product experts.